


CyberScope® Air

Quick Start Guide



CyberScope® Air is a rugged, handheld cybersecurity scanner. The multi-function tool provides comprehensive wireless site security surveying, analysis, and reporting for your on-premises site networks. It features applications from our AllyWare™ Common Technology platform for Wi-Fi device discovery and network analysis.

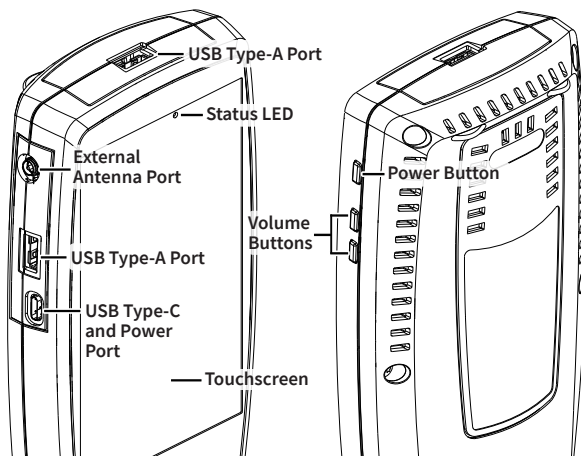

AutoTest

Validate infrastructure hardening and network segmentation.



EZ Wi-Fi

Quickly connect and view Wi-Fi results on a simplified interface.



Discovery

Identify, inventory, and scan devices for vulnerabilities.



Ping/TCP

Scrutinize unauthorized devices and open ports with targeted tests.



Spectrum

Display signal and noise graphs in real time with a Spectrum Analyzer.



iPerf

Measure network throughput to an iPerf server.



App Store

Download and install 3rd-party applications.



Nmap

Scan your network for hosts, open ports, and running services.



Wi-Fi

Detect problematic traffic and locate wireless devices.



Path Analysis

Trace Layer 2 and 3 routes to track suspicious devices.



Capture

Capture network traffic for security investigations.



AirMapper™

Perform Wi-Fi site surveys and generate heat maps in Link-Live.



Link-Live™

Upload, manage, analyze, and report results and data.

View the **User Guide** and training videos from your CyberScope Air Home screen.



Getting Started

1. **Charge** for about 3 hours by plugging in the included power adapter at the USB-C port.
2. **Hold down** the power button on your CyberScope Air for **one full second** to turn it on.
3. **Follow the on-screen prompts** to make required startup selections.

Once startup has completed, the Discovery and Wi-Fi apps begin collecting any available wireless data in the background.

4. Open the **EZ Wi-Fi** app from the Home screen.
5. Touch **[Tap here to set the SSID]** to select an available SSID and input the password.
6. Tap **START** to initiate the test steps and connect.
7. To register and activate your CyberScope Air, **Claim** your unit at Link-Live.com, or visit support.netally.com/registration.

Navigating the Interface

Tap, drag, and swipe to navigate through apps, open side menus, pull down the notification panel from the top, and pull up the Apps screen from the bottom of the Home screen.


The main navigation buttons are always shown at the bottom of the touchscreen:

-  **Back:** Return to the previous screen.
-  **Home:** Go to the Home screen.
-  **Recent:** View your recently used applications.

Customizing Tests

Open **AutoTest** from the Home screen to build and edit test Profiles. A **Profile** is a series of tests and measurements, configured and saved with your connection and threshold settings. Tap an individual test card to view more details and actions.

-  **Menu:** Access multiple test modes and settings.
-  **Settings:** Configure the current test or profile.
-  **Action:** Add more tests or navigate to other apps.

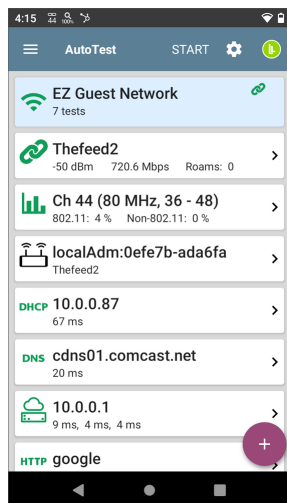

Connecting to Link-Live

The Link-Live platform (cloud-based or on-premise) stores test results and other data for analysis, reporting, and documentation. By default, test data is automatically uploaded to Link-Live once your CyberScope Air is **claimed**.

To start, create a user account at Link-Live.com, and sign in.

-  **Claim Unit:** On first sign-in, a pop-up window prompts with steps to claim a device. Otherwise, go to the **Units** page, and select the Claim Unit button at the lower right.

On your CyberScope Air Home screen, open the **Link-Live** app, and tap **CLAIM NOW**.

More Information

Customer Support: netally.com/support

User Guide: netally.com/user-guides/cyberscope-air



PN 770-000068 Rev 003
For software v3.0
© 2026 NetAlly, LLC