


LinkRunner® AT 1500, 3000, and 4000

Quick Start Guide

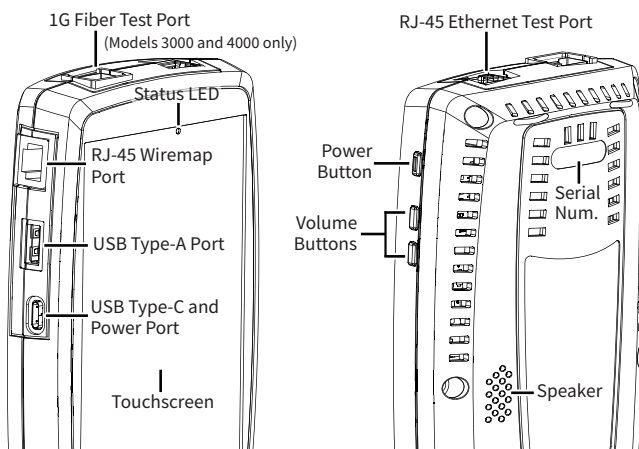

LinkRunner® AT is a rugged hand-held tool for testing wired Ethernet networks. The 1500 can test copper connections, and 3000/4000 models can test both copper and fiber. All models feature apps from our third-gen common software platform.

All LinkRunner AT Models



AutoTest

Verify your network layers 1 through 7 in seconds.



EZ Wired

Quickly connect and view test results on a simplified interface.



Cable Test

Determine length, status, and mapping and employ toning.



Link-Live™

Upload, manage, analyze, and report results and data.



App Store

Download and install 3rd-party applications.

View the **User Guide** and training videos from the Home screen of your LinkRunner AT.



LinkRunner AT 3000 and 4000



Ping/TCP

Validate and monitor responsiveness and connectivity.



LANBERT™

Qualify layer 1 copper/fiber media for error free operation.



Reflector

Act as a reflector for end-to-end performance testing.



Discovery

Identify and analyze devices on your network.

LinkRunner AT 4000 only



Capture

Capture network traffic with intuitive filters.



iPerf

Measure network throughput to an iPerf server.



Path Analysis

Trace Layer 2 and 3 routes.

Getting Started

1. **Charge** for about 3 hours by plugging in the included power adapter at the USB-C port.
2. **Hold down** the power button on your LinkRunner AT for **one full second** to turn it on.
3. **Follow the on-screen prompts** to make required startup selections.
4. **Connect** to an active switch port using the **top copper** or **fiber test port**.
A connectivity test runs automatically once a live connection is detected in the top RJ-45 port. To connect using fiber, start the EZ Wired app.
5. Open the **EZ Wired** app to view status icons and results.
6. Tap **START** to connect or reconnect.
7. To register and activate your LinkRunner AT, **Claim** your unit at Link-Live.com or visit support.netally.com/registration.

Navigating the Interface

Tap, drag, and swipe to navigate through apps, open side menus, pull down the notification panel from the top, and pull up the Apps screen from the bottom of the Home screen.


The main navigation buttons are always shown at the bottom of the touchscreen:

-  **Back:** Return to the previous screen.
-  **Home:** Go to the Home screen.
-  **Recent:** View your recently used applications.

Customizing Tests

Open **AutoTest** from the Home screen to build and edit test Profiles. A **Profile** is a series of tests and measurements, configured and saved with your connection and threshold settings. Tap an individual test card to view more details and actions.

-  **Menu:** Access multiple test modes and settings.
-  **Settings:** Configure the current test or profile.
-  **Action:** Add more tests or navigate to other apps.

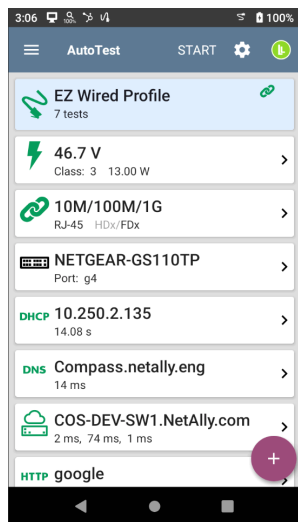

Connecting to Link-Live

The Link-Live platform (cloud-based or on-premise) stores test results and other data for analysis, reporting, and documentation. By default, test data is automatically uploaded to Link-Live once your LinkRunner AT is **claimed**.

To start, create a user account at Link-Live.com, and sign in.

-  **Claim Unit:** On first sign-in, a pop-up window prompts with steps to claim a device. Otherwise, go to the **Units** page, and select the Claim Unit button at the lower right.

On your LinkRunner AT Home screen, open the **Link-Live** app, and tap **CLAIM NOW**.

More Information

Customer Support: netally.com/support

User Guide: netally.com/user-guides/linkrunner



PN 770-000062 Rev 006
For software v3.0
© 2026 NetAlly, LLC